

Quick Virtual Panel Software Installation Guide

PC Requirements:

- 1. Windows XP or Windows Vista
- 2. Administrative privileges (to allow new applications to be installed)
- 3. CDROM drive

Step 1. Install the AgileMesh "Installer Software" CD into the CD drive

The AgileMesh Master Installer will start automatically and the following screen will appear. If the Installer does not start automatically, double-click on the application named "master_installer.exe" on the AgileMesh "Installer Software" CD.



Click "Run" and the AgileMesh Installer splash screen below will appear momentarily.



Click the Virtual Panel check box on the Installation Options screen to add the Virtual Panel to the default list of applications to be installed.

Click the "Install" button.



You will be prompted to load Java, WinPcap and Jpcap. Take all the default options.

The following message will be displayed when the Virtual Panel application begins to install:

Click "Yes" to continue the installation of

AgainWest i	estables 1.3	100
The Witual Pare Contact AglePle Continue to inst	(program requires a LICENCE file preated by AgilePresh to run in to get wLICENCE file. al Yobuel Pares?	this program.
	Les Po	

the Virtual Panel. The license will be loaded next.

Step 2. Install the AgileMesh "Virtual Panel License" CD into the CD drive

The Virtual Panel License application should run automatically. If it does not, double click on the file formatted as "city_date.exe". For example:

"Cape_Coral_021208.exe"

The Virtual Panel License splash screen will momentarily appear. See below.



The following completion screen will appear.

🖳 AglieWesh License Setup: Completed	
Completed	
Show Betalk	
Canal Washington 7.22	(Jne

Click "Close" to complete the installation.

The Virtual Panel (and license) can be installed on multiple PCs.

Proprietary & Confidential – AgileMesh, Inc © 2008



Step 3: To start the Virtual Panel, click on the Virtual Panel icon.



The following screen will appear:



The display will flash until the PC running the Virtual Panel and the radio can communicate via an Ethernet cable.

Step 4: PC setup

Make sure the PC running the Virtual Panel:

- 1. Has an Ethernet adapter with a static IP set to 192.168.224.15.
- 2. Has Ethernet connectivity to the radio
- 3. Has all virus software and firewalls removed
- 4. Can ping 192.168.224.150

Once the display stops flashing, the Virtual Panel and the radio are communicating.

For a radio without a camera input (AV1200 or an outdoor radio) the display will have dashes in the "Node" display as shown below:



Step 5: Enable Public Safety Band (only for AgileMesh models that end in "–PS"

Skip to **Step 6** if the radio is not Public Safety capable. The following step must

be taken to configure the Virtual Panel to control a Public Safety radio. The city must have a valid FCC Public Safety License and the radio to be controlled must be a Public Safety capable radio.

Right click on the black background on the Virtual Front Panel and select and click on "Config" from the menu as shown below:



The following screen will be displayed:

CARLE N III I	7461 Calleghen Rd	Mesh Radio MAC Address
Sube	301	00-12-02-03-10-03
City	San Antonio	Grant and a start from the
State	TK	
Zip	78229	
Phane	210-207-7394	
Contact	Eric Shaay	
License Date	12(5)08	
Max Devices	Б	
etivork. Video S	erver MACsi	
etivork Video S Mesh Radio	erver MACsi	Network Wideo Server
etivork Video S Mesh Radio Login i	aglers	Network Wideo Server Pronii 192 168 224 49
etivork Video S Mesh Radio Login i Passivordi	agles	Network Wdeo Server Promi 192 168 224 49 Toi 192 168 224 190
etwork Video S Mesh Radio Login: Pessword Pallow Public	aglen Safety Dand	Network Wdeo Server Proniii 192 168 224 49 Toi 192 168 224 190 Logini admin

Click the check box labeled "Allow Public Safety Band" and click on "Save" ONLY ON PUBLIC SAFETY RADIOS (i.e. AV1200-PS or AV1210-PS).

Step 6: Congratulations, the Virtual Front Panel is now operational!